


Features

- 100% Digital
- Volume Control
- Multi-Memory Push Button
- Adaptive Noise Reduction
- Directional Microphones
- Adjustable Power On Delay
- Low Battery Indicator
- Memory Tone Indicator
- Replaceable Thin-Tube
- Adaptive Feedback Reduction
- Dynamic Speech Enhancement

* Not all features may apply to your instrument.


Identifying Your Device

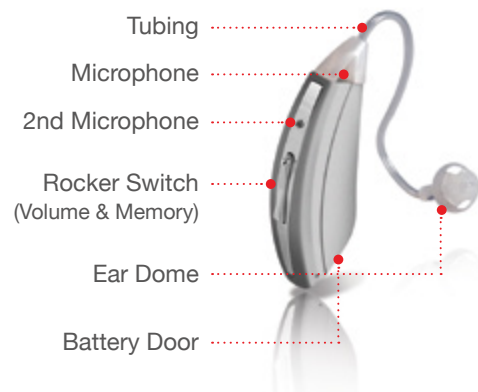




The serial number is on the bottom of the case while the model is on the battery door.



World Headquarters

 HearingDirect Ltd
Unit 4 Nine Mile Water
Nether Wallop
SO20 8DR
United Kingdom

 1-800-216-2331
 CustomerCare@HearingDirect.com
 HearingDirect.com

UG / HD360 / USA / 8 © 16

Welcome to a whole new world of hearing™

HD360

Welcome back to the world of sound!™

A belief that in order to succeed, you must have a certain passion and desire to give your every endeavor your very best. We forge this very commitment to excellence into every hearing instrument in our portfolio.


A rare combination of state of the art technology and custom craftsmanship brings you the best instruments available today. Currently, our products are distributed all over the world. We thank you for allowing us to assist with your hearing needs.

These instructions along with the guidance from HearingDirect.com will help you attain maximum benefit from your hearing instrument(s).



Cleaning & Changing Tubes


Use a soft cloth to wipe the OTE after use to remove any particles or moisture. The Cleaning Tool is used to remove debris / wax from the sound tubing and earbud.

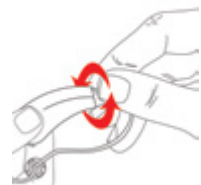

1. To remove tubes gently rotate the sound tubing holding the instrument firmly.



2. Pull sound tubing from the hearing instrument.

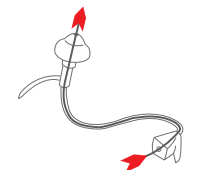

3. To clean, insert the cleaning tool through the nose cone end. Thread all the way through the tubing & earbud.



4. To reassemble or change sound tubing simply line up and push tubing until it snaps into place.

Powering Your Device

Batteries - Uses a 312 battery

TO TURN ON - With your finger, gently open the door. Insert battery and close the door. Your device is equipped with a power on delay, you will be given several seconds to seat the device comfortably in your ear before it turns on.

When placing the battery in your device, position the battery with the positive (+) side (or totally flat side) up and insert it into the battery compartment section of the battery door. If the battery is inserted incorrectly or upside down, the door will not close. Do not force the door closed.

TO TURN OFF - To remove the device simply grasp the tubing close to the earbud or earmold and remove from ear canal. Then remove instrument from the top of the ear. To turn your device off, simply open the battery door completely. Store in a safe dry place.

CAUTION: Batteries are dangerous if swallowed! Keep batteries out of the reach of children. Never put batteries in your mouth for any reason they are easily swallowed. In the event a battery has been swallowed, seek immediate medical attention. For more information call the National Battery Hotline at 202-625-3333.

NOTE: Some irritation may occur due to becoming accustomed to wearing a new hearing instrument. If swelling or redness occurs, discontinue use and visit your Doctor.

Inserting Your Device

Before insertion, please clean your ear and make sure the battery door is closed properly.

- Hold the tubing with your thumb and index finger close to the ear dome (Fig. A).



Fig. A

- Place the instrument over the top of the ear. (Fig. A)



Fig. B

- Gently insert the ear dome into your ear canal. (Fig. B)



Fig. C

- Move the retention lock into position by lifting and placing it into the bowl of your ear. (Fig. C)

Earbuds / Tips

- D. Tube with earbud

- E. Tube with ZipTip -

Keep the small vent hole (F) to the bottom of the ear farther from the device



Volume Adjustment

The rocker switch is both a volume control and multiple memory mode control.

For all adjustments place thumb into the helix portion of your ear. Next, take your index finger and place it on the rocker switch. (Fig. 1)

Briefly push/release the top half of the switch to increase volume (Fig. 2) and bottom half of switch to decrease the volume (Fig. 3). Each short press changes the volume slightly. Even after you power cycle your instrument (off/on), the volume control setting last used will be restored.

Fig. 1



Fig. 2


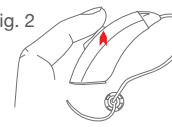


Fig. 3

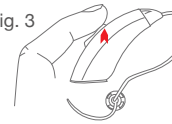

Memory Adjustment

Hold down the top half of the rocker switch for 3 seconds (Fig. 2). The number of beeps correspond to the memory that you have selected. The programs will cycle up in sequence 1,2,3,1,2,3 etc.... Hold down the lower half of the rocker switch for 3 seconds (fig. 3) to cycle down in sequence 3,2,1,3,2,1 etc....